




KEYTEC, INC.

A global leader of touch-interactive technology since 1987.



KEYTEC Knockdown Kiosk
Kiosk display and assembly instruction manual

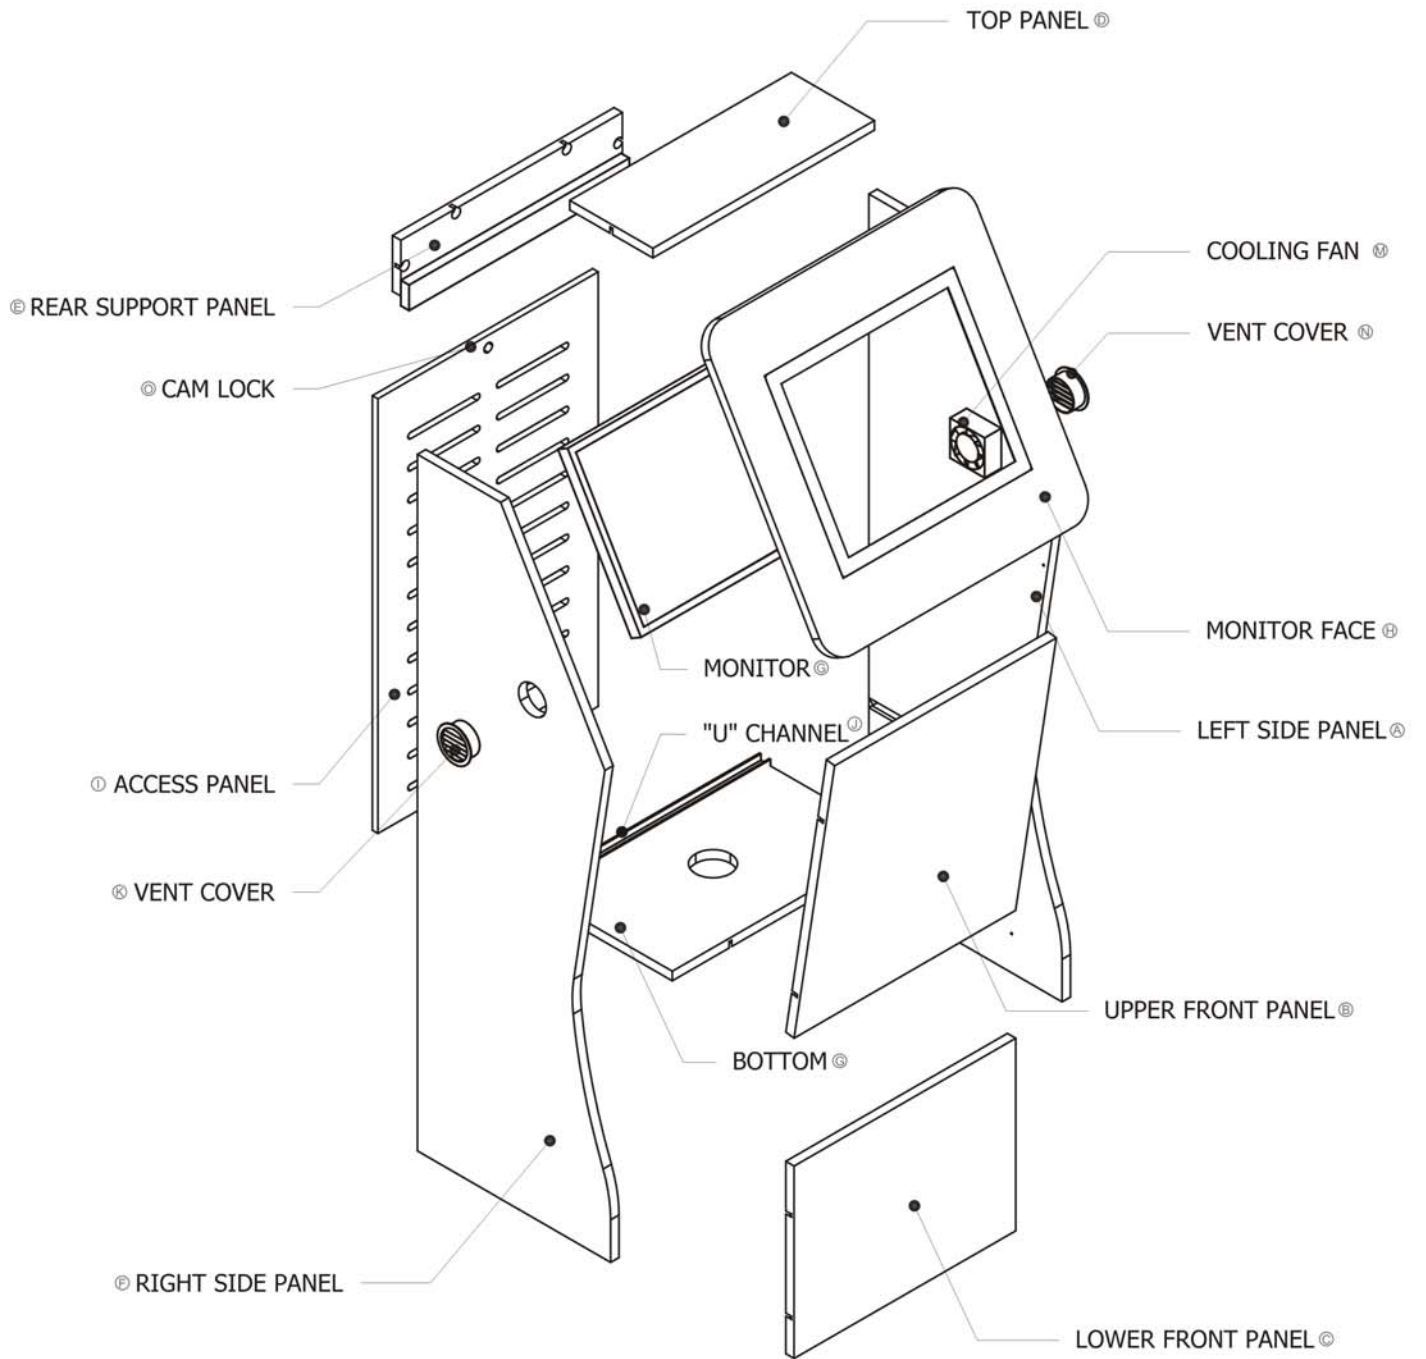

- | | | | |
|---|--------------------|---|--------------|
| ⑨ | LEFT SIDE PANEL | ① | ACCESS PANEL |
| ⑦ | UPPER FRONT PANEL | ⑪ | "U" CHANNEL |
| ③ | LOWER FRONT PANEL | ⑫ | VENT COVER |
| ⑩ | TOP PANEL | ④ | MONITOR |
| ⑤ | REAR SUPPORT PANEL | ⑭ | COOLING FAN |
| ⑥ | RIGHT SIDE PANEL | ⑮ | VENT COVER |
| ③ | BOTTOM | ① | CAM LOCK |
| ⑧ | MONITOR FACE | | |


Cam insert & Cam connector Close Up



Carefully align cam insert with the cam connector.



Place cam insert into cam connector.

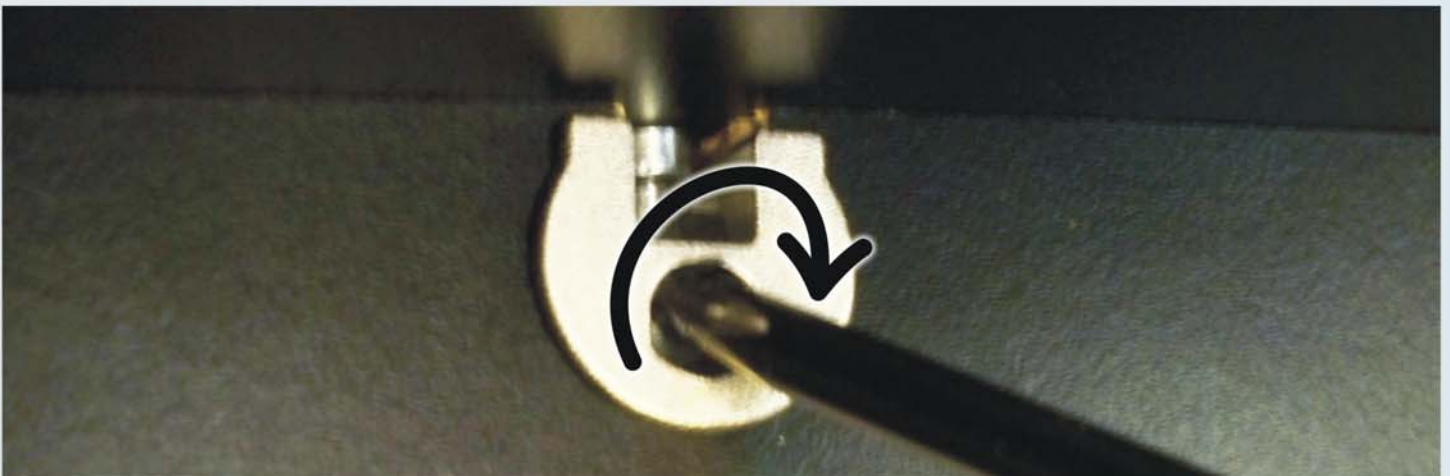

To lock cam connector. With a phillips head screwdriver, turn clockwise to lock.



1 Lay Left side panel(A) on the floor or a table.



2 Take the Upper front panel(B) and attach it to the left side panel(A) connector. Tighten with a phillips head screwdriver.



3 Take the lower front panel(C), and attach it to the left side panel(A) connector, and tighten.



4 Attach the Top panel(D), and the Rear support panel(E) to the Left side panel(A).



5 Take your Right Side Panel,(N) and carefully place it on the Lower front panel(C), Upper front panel(B), Top panel(D), and Rear support panel(E). Tighten connectors to secure.




6 Once you have completely tightened all connectors, lift kiosk to an upright position. This may require more than one person.



7 Take the Bottom(G) and slide it between the Right side panel(F) and Left side panel(A). Secure in place by tightening the connectors.



8 Take the monitor Face(H), and place it face first on a clean flat surface so that the black side is facing up.

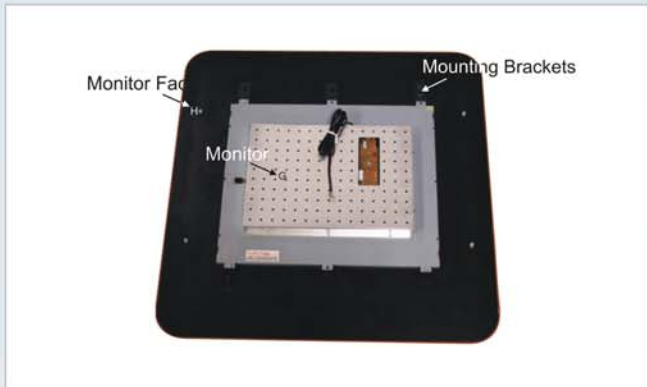

9 Place monitor in monitor face. Line up the brackets on the monitor with the mounting brackets on monitor face. Securely screw into place.



10 Place the monitor face(H) on top. Attach to the Left side panel(A), The Right side panel(F), and the Rear support panel(E). *Note: you may need to loosen the sides to make inserting monitor face into cam connectors.*



11 Take the Access Panel(I) and slide it in the "U" Channel(J). Push it in place and turn Cam lock(O) to lock in place.



12 The Kiosk is now complete.